

### OSMAC E-Series Satellite Controller — Hand Held Command Code Quick Reference

**Note:** All operation commands must begin with \*9 followed by the 3-digit satellite address number.

Command Code	Operation Description
7515	<b>Sequentially syringes a specified station number range;</b> e.g., 7515 10 20 will syringe stations 10 through 20 sequentially.
7540	<b>Turns off all stations</b> (this satellite only).
8006 01	<b>Sets the syringe time in 30-second intervals;</b> e.g., 8006 01 0100 (without a password) or 8006 pppp 01 0100 (with a password) sets the syringe time to 100 intervals (50 minutes). The number of intervals must be given as four digits with leading zeros but can be no greater than 0255.
7518	<b>Turns on individual stations for a specified number of minutes;</b> e.g., 7518 10 23 24 25 turns on stations 23, 24 and 25 for 10 minutes.
7510	<b>Turns off individual stations;</b> e.g., 7510 01 02 40 turns off stations 1, 2 and 40.

Command Code	Operation Description
7511	<b>Turns on individual stations;</b> e.g., 7511 01 02 40 turns on stations 1, 2 and 40.
7512	<b>Syringes individual stations</b> for a predetermined number of 30-second intervals (already defined in the satellite); e.g., 7512 01 02 turns on stations 1 and 2 for 30-second intervals.
7516	<b>Sequentially syringes individual stations;</b> e.g., 7516 10 11 will syringe stations 10 and 11. Multiple syringe groups can also be run. Enter two dashes between stations to designate separate syringe groups; e.g., 7516 10 11 - - 22 24 26 28 will run two syringes at the same time. First on stations 10 and 11, followed by stations 22, 24, 26 and 28.
7521	<b>Turns on a sequential station run operation;</b> e.g., 7521 01 turns on station 1. To toggle forward through the stations, press *1; to toggle back through the stations, press *2.
7544	<b>Enables operation of all stations in all satellites.</b>

**Note:** The satellite address code is not used with the 7544 command code.